

- 32 Countershaft gear
- thrust washer (front)
- 33 Reverse shifting arm
- 34 Reverse shifting arm shoe
- 35 Filler plug
- 36 Drain plug
- 37 Lock washer
- Bolt (transmission-toclutch housing)
- 39 C-washer

- bearing rollers
- 44 Reverse idler gear bearing washer
- 45 Reverse idler gear
- 46 Lock washer
- 47 Adapter plate bolts
- 48 Drive gear locknut
- 49 Washer
- 50 Adapter plate
- Countershaft/reverse idler shaft lockplate

- spacer
- 57 Rear bearing locating snap-ring
- 58 Rear bearing
- Reverse shifting arm pivot pin
- Reverse shifting arm pivot
- Reverse shifting arm pivot O-ring
- 62 Washer

- 68 Front bearing retainer washer
- 69 Front bearing
- 70 Front bearing locating snap-ring
- Front bearing lock ring
- Front bearing cap gasket
- 73 Front bearing cap
- Front bearing cap bolts
- 75 Lock washer